

ZHAW SCHOOL OF ENGINEERING

PROJEKTARBEIT

IT

---

Title

---

*Authors:*

Linda Helen BOEDI

Valentin BOSSI

*Supervisor:*

GELKE

November 15, 2017

# Chapter 1

## Acknowledgement

## Chapter 2

### Affidavit

# Contents

## Chapter 3

### Conceptual formulation

# Chapter 4

## Motivation

# Chapter 5

## Fundamentals

### 5.1 Competitor Analysis

#### 5.1.1 Optical versus acoustical measurement

To measure the frequency of the balance wheel of a mechanic clock there exist mainly two methods on the market, acoustical and optical measurement. The common used method is by analyzing the noises of the balance wheel. More expensive devices use both acoustical and optical feedback. In order to be able to classify the rate deviation well enough, it is usually measured in different positions of the watch.

##### 5.1.1.1 Acoustical measurement

The first used method to get the frequency measurement of the balance wheel was by using a vibrograph was used. For every "tick" of the clock a line was drawn onto a ongoing strip of paper. Out of the distance between of these lines the frequency was calculated. (1) But as this method isn't the most accurate other techniques are used nowadays. Modern watch timing

Comparison acoustical and optical measurement		
	acoustical	optical
since	around 19th century (2)	end of 20th century (2)
accuracy	0.1 s/d	0.1 s/d
advantages	most experience (exists for about 200 years)	measurement can be done anywhere
disadvantages	background noises need to be filtered out	

machines use an oscillating quartz crystal as comparison for the frequency of the balance wheel (1). The noises of the balance wheel are recorded and amplified with a microphone whereat unwanted background noises need to be filtered out.

#### 5.1.1.2 Optical measurement

About hundred years later, optical watch timing machines joined the acoustical ones. There are barely devices on the market, which use only optical measurement, but several companies started to combine their acoustical with optical metering. One way to scale the frequency of the balance wheel optically is by using a laser. The beam will be periodically interrupted by the balance wheel and thus the frequency can be calculated (3). In this paper the frequency should be quantified optically by using image processing. There is hardly to none company out there, which uses the last technique for measuring the frequency.

### 5.1.2 Companies

#### 5.1.2.1 Witschi - WisioScope S

WisioScope S tests mechanical watches acoustically and optically. The measurement is done parallel and in this way is more accurate as both signals are used for the calculation of the frequency. The optical metering is done using a laser and lighting, a camera helps to adjust the watch properly. The costs of their product are: CHF 10450.-

Measurement gear deviation	
scope	+/- 999.9 s/d
resolution	0.1 s/d
price	CHF 10450.-

#### 5.1.2.2 Lepsi - WatchScope/WatchAnalyzer

The WatchScope and WatchAnalyzer from Lepsi are especially for lovers and not really for production. Both products are Swiss technologies. Both devices only work with an acoustic input, with measurements of either a few seconds or up to 24 hours. All data can then be queried with the smartphone. WatchScope is the smaller, more convenient version. With the WatchAnalyzer you can easily measure the rate deviation of the watch in several positions. The prices for this product are CHF 369.00, resp. CHF 929.-



Measurement gear deviation	
scope	+/- 1000 s/d
resolution	0.1 s/d
price	CHF 369.-, resp. CHF 929.-

### 5.1.2.3 Greiner Vibrograf - Compact 900

The Compact 900 measures only the beat noises of the balance wheel. The price is CHF 4070.-

Measurement gear deviation	
scope	+/- 1000 s/d
resolution	0.1 s/d
price	CHF 4070.-

## 5.2 Reference measurement and test watch

At first some general information to the test watch, which was used.

The test watch is a watch of the caliber ETA C01.211 it is a chronograph, with a diameter of 31 centimeters. It has a beat rate of 21600 beats per hour and therefore a frequency of 3 Hz. Additionally the watch has a power reserve of 43 hours. (5)

In order to obtain an exact reference value of the frequency of the balance wheel of the test watch, an acoustic measurement was carried out with a professional measuring device, the Greiner Vibrograf - Compact 900, and the rate deviation was determined.

In order to calculate the frequency from the gear deviation of the balance wheel, first some transformations had to be carried out.

### 5.2.1 Number of impacts

Since the rate deviation has been calculated in seconds per day and the number of strokes per hour, i. e. the number of audible impulses (beats) of a two-armed armature of a mechanical watch per hour, is known, these two quantities must first be brought to a unit. The relationship between the beat number ( $n^*$ ) and frequency ( $f$ ) is as follows:

$$n^* = 2f * 3600$$

Number of impacts [1/h]	Impact duration [s]	Oscillation number [1/h]	Period duration [s]	Frequency [Hz]
18'000	0.200	9'000	0.400	2.50
19'800	0.182	9'900	0.364	2.74
21'600	0.166	10'800	0.333	3.00
28'800	0.125	14'400	0.250	4.00
36'000	0.100	18'000	0.200	5.00

**Illustration 1:** Number of strokes, period duration and frequency of the balance of automatic wristwatches

and therefore:

$$f = \frac{n^*}{7200}$$

### 5.3 Picamera settings

# Chapter 6

## Experimental approaches

### 6.1 Evaluation of possible technologies

#### 6.1.1 Frame analysis versus given GPU motion vectors

One approach is to compare each image with the subsequent image and to mark the displacements with motion vectors. This would mean a considerable computational effort. Such motion vectors are already made by the GPU, in order to compress videos in the H.264 codec.

#### 6.1.2 Frame analysis via OpenCV

With the library OpenCV it is possible to determine the optical flow of an image sequence.

The optical flow represents the vector field of the velocities of the points of an image sequence. It is a useful representation of motion information in image processing. The local optical flow is an estimate of patterns in an image in the vicinity of a viewed pixel.

One possibility would be to follow the course of a velocity vector and thereby calculate a period of the frequency of the balance wheel. The calculation of the flow at selected points is also called feature point tracking. Another approach would be to calculate the frequency based on the velocity obtained from the optical flow, since it is more or less a circular movement.

One difficulty with this procedure is that one has to commit to certain pixels that one examines. This can cause problems if the clock is placed differently, because wrong points (worst-case scenario: points in which movement never takes place) can cause problems for the calculation.

The OpenCV library uses the Lucas-Kanade method to calculate the optical flow. The Lucas-Kanade method also assumes that the flow in the

local environment of the pixel for which the flow is intended is the same. So more or less a whole set of pixels is considered. The flow can thus be determined by calculating the derivatives (= gradients).

One characteristic of this method is that it does not provide a dense flow, i. e. the flow information disappears quickly with the distance from the edges of the image. The advantage of the method is its relative robustness against noise and smaller defects in the image.

### **6.1.3 Motion vectors from high level library picamera**

The picamera library is capable of storing all motion vector estimations of the h.264 encoder in an object. This object with all motion vectors for all frames can be later accessed and used. The motion data is at the level of macro-blocks where the values are 4-bytes long and consist of a signed 1-byte x vector, a signed 1-byte y vector and an unsigned 2-byte SAD (Sum of Absolute Differences) value. All motion data values can be easily accessed frame by frame. (2)

The sum of absolute differences is a positive number resulting from the formation of the difference between two digital images. It serves as a measure of the difference between two images.


The SAD is obtained by subtracting the color values of the images pixel by pixel from each other and adding them up by amount. (3)

The advantage of the Picamera library is that compared to the possibilities of the OpenCV library, the information about the motion vectors is available faster, since this library already has an internal object (motion-data), which stores all necessary information as well as the SAD value.

## **6.2 Animation of motion vectors**


After deciding which library to use, some experimental sessions took place to get a better understanding of the so called motion data values or motion vectors. With the picamera library it is easy to access these motion data values so the hard part wasn't to get the values but to understand how they are constructed. The motion data object consists of multiple values; a signed 1-byte x vector, a signed 1-byte y vector and an unsigned 2-byte SAD value for each macro-block of a frame.

In a first step all SAD values were animated with colors to get a better understanding of how good the information they keep is and how as well as if they can be used to calculate the frequency of the movement of the balance wheel.

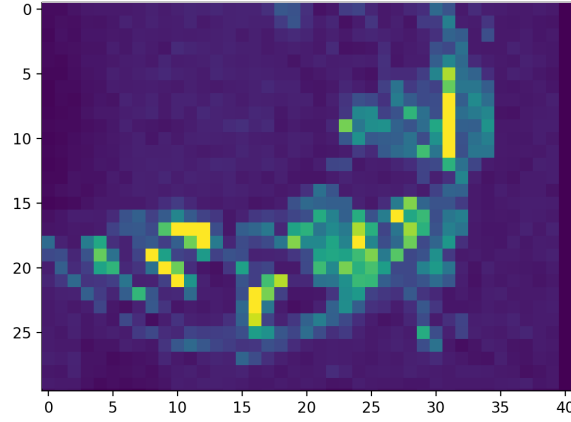

**Illustration 1:** Animation of the SAD values, the lighter the color the higher the value of the SAD

Further the x and y vector were analyzed and also animated. But as those vectors itself are hard to use and give incomplete information (WHY?), the hypotenuses were calculated with Pythagoras' theorem and displayed similar to the SAD values. The hypotenuses give information about the amount as well as the direction of the motion.

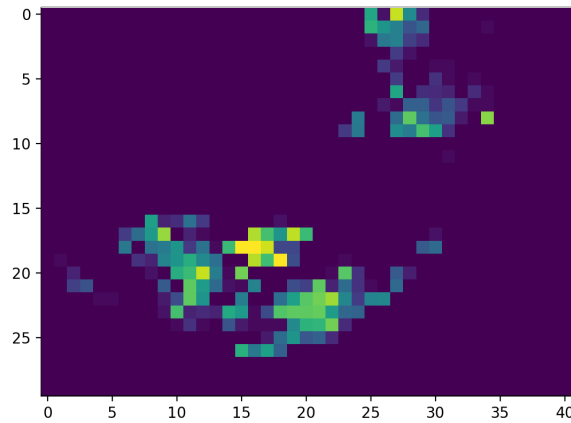

**Illustration 2:** Animation of the hypotenuses, the lighter the color the higher the value of the hypotenuse

Another experimental approach was displaying the motion vectors as arrows directly in the video. This approach was helpful to get a better understanding under which conditions the best result of the motion vectors is reached.


### 6.2.1 Motion vectors visualized in a frame

Codecvisa was used to display the motion vectors of a frame. The result is shown in Figure 3.



**Illustration 3:** Motion vectors drawn in one frame

Another approach used Excel was to determine whether a motion vector from one frame is the predecessor of the motion vector in the next frame. The hope was that a moving pixel could be followed and therefore the location of the pixel would always have been known. The result was sobering because one frame and motion vector cannot be associated with another frame and motion vector. This experiment looked at the idea of the optical flux with the movement vectors of the MMAL (Multi-Media Abstraction Layer).

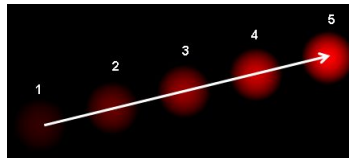

**Illustration 4:** It shows a ball moving in 5 consecutive frames. The arrow shows its displacement vector.


## 6.3 Picamera library

## 6.4 Crude calculation of frequency

With the help of the motion vectors and the corresponding time stamps per frame, a rough calculation of the frequency can be made. All x, y or SAD values contained in the image are summed up. If the sum of all values is small, it is very likely that the balance wheel is at a standstill before turning back again. For small values, the time stamp is registered and the difference to the next standstill is calculated. Since the balance wheel triggers half a oscillation, it has moved from one stop to the next half point. In order to roughly calculate the frequency, an Excel sheet was created in which all the accumulated x- and y-values were entered and the standstills of the balance wheels were determined by eye. The half-oscillations and the frequency were calculated from the time intervals of the standstills. Afterwards, the average of all calculated frequencies was determined and it was recognized that the results with this method are good enough to determine the frequency and thus the gear deviation.

xSumAbs	ySumAbs	timestamp	timestamp stillstand	half period	period	hertz	hertz average
0	0	None	88645	166210	-		3.032192904
3050	2704	11081	254855	166209	-	332419	3.00825163
2540	1770	22161	421064	177290	-		
1106	1464	33242	598354	155129	-	332419	3.00825163
3422	2870	44324	753483	177289	-		
3070	2352	55403	930772	166210	-	343499	2.91121663
1924	1658	66494	1096982	166210	-		
1012	1438	77565	1263192	166209	-	332419	3.00825163
66	146	88645	1429401	166209	-		
500	982	99726	1595610	166210	-	332419	3.00825163
21266	20592	110807	1761820	166209	-		
2860	2780	121887	1928029	166210	-	332419	3.00825163
3202	2546	132967	2094239	166209	-		
3322	2986	144048	2260448	166209	-	332418	3.00826068
3342	2412	155129	2426657	166210	-		
2164	2730	166210	2592867	166209	-	332419	3.00825163
3192	3012	177291	2759076	166209	-		
3142	2736	188371	2925285	166210	-	332419	3.00825163
2236	2146	199452	3091495	166209	-		
2392	3192	210533	3257704	166209	-	332418	3.00826068
3108	3434	221613	3423913	166210	-		
3480	2130	232693	3590123	166209	-	332419	3.00825163
2204	1290	243775	3756332	166211	-		
354	440	254855	3922543	166208	-	332419	3.00825163
754	496	265935	4088751	166209	-		
3160	2034	277016	4254960	177292	-	343501	2.91119968
3156	2560	288097	4432252	166208	-		
3264	3118	299178	4598460	166209	-	332417	3.00826973
3426	2736	310258	4764669	166209	-		
2282	2934	321338	4930878	166210	-	332419	3.00825163
3046	3350	332419	5097088	166209	-		
3682	4380	343500	5263297	166210	-	332419	3.00825163
3168	2472	354580	5429507	166210	-		
2294	2394	365661	5595717	166208	-	332418	3.00826068
3178	3328	376742	5761925	166210	-		
3354	2864	387822	5928135	166210	-	332420	3.00824258
2708	2438	398903	6094345	166209	-		
1394	1604	409984	6260554	166209	-	332418	3.00826068
192	456	421064	6426763	166210	-		
516	908	432145	6592973	166209	-	332419	3.00825163
1724	1894	443226	6759182	166210	-		
3006	2476	454306	6925392	166209	-	332419	3.00825163
3732	2800	465387	7091601	166209	-		
3586	3248	476467	7257810	166211	-	332420	3.00824258
3152	2598	487548	7424021	166208	-		

**Illustration 4:** Excel sheet with summed x-, y-values, timestamps and calculated frequency

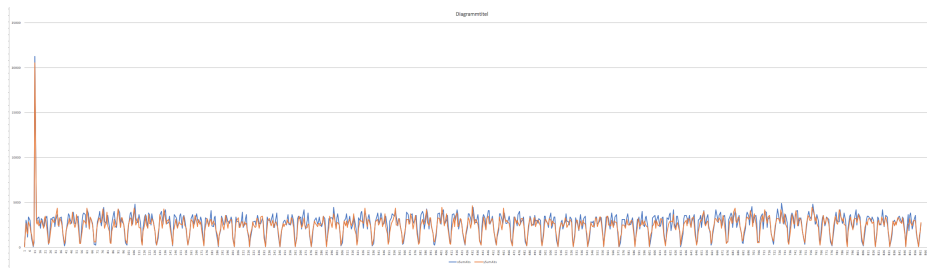

**Illustration 4:** Illustration of summed x-, y-values over time



# Chapter 7

## Calculation of the frequency

### 7.1 Implementation of the algorithm

In a next step, the results of the rough calculation from the Excel sheet were transferred into a Python program.

The greatest difficulty proved to be the detection of the minima, which characterize the standstill of the balance wheel. These were relatively easy visible to the unaided eye, but in an automatic calculation, appropriate conditions had to be set in order to take into account the correct values and correct the inaccuracies caused by the noise. The setting of an upper limit for the minima proved to be a suitable condition. All minima below this limit are therefore taken into account.

Furthermore, the calculation of the frequency in the Python program has been further simplified by not calculating each period individually, but by selecting the first and the last minimum over the whole period of time, in which it was recorded. This time span is then calculated by half of the number of minima minus 1. Half, because every half of the period the balance wheel stops and minus 1, because otherwise a half-period would be taken into account too much. This approach reduces the number of rounding errors, resulting in higher accuracy. After this calculation, the period duration  $T$  is now available, from which the frequency  $f$  can be calculated quite simply:

$$f = \frac{1}{T}$$

# Chapter 8


## Results

### 8.1 Measurements

This measurements were taken in different positions of the watch with different length of recordings. Each position were recorded in 10, 20, 40 and 80 minutes.

Figure 5 and Table 3 shows the deviation per day based on the following calculation: Taken the first timestamp ( $t_1$ ) of a stillstand and taken the last timestamp ( $t_2$ ) of a stillstand, the counted number of stillstands ( $s_1$ ), number of strokes per hour ( $s_2$ ) (21600):

$$\begin{aligned} t_2 - t_1 &= \Delta t \\ \Delta t / s &= f * 2 \\ (f * 2 * s_2) - 3600 &= deviationperhour \end{aligned}$$

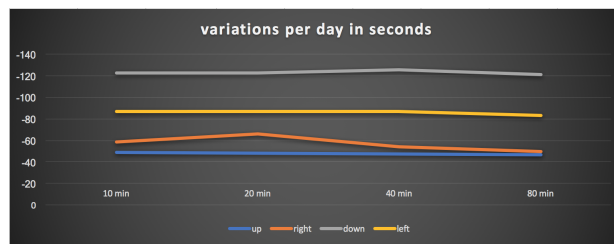

**Illustration 5:** Variation of different time and position recordings

Positions	Greiner Compact 900	10 min	20 min	40 min	80 min
up	-13	-48.7	-48.0	-47.6	-47.0
right	-30	-58.3	-65.5	-54.4	-49.4
down	-20	-122.2	-122.2	-125.4	-121.4
left	-14	-87.0	-87.1	-87.1	-83.1

Table 3: variations per day in seconds

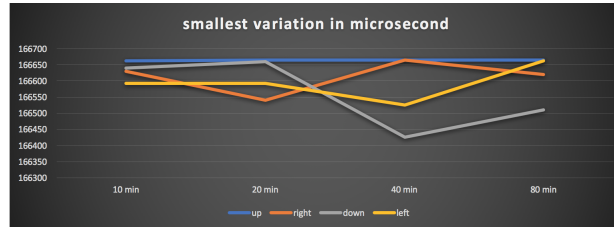


Illustration 6: Variation of different time and position recordings

Positions	Greiner Compact 900	10 min	20 min	40 min	80 min
up	-13	-2.9	-0.8	-1.3	-0.8
right	-30	-19	-65.6	-0.8	-24.7
down	-20	-13.8	-3.4	-125.2	-81.7
left	-14	-39.2	-39.2	-72.9	-2.9

Table 4: variations per day in seconds based on smallest variation

## 8.2 Calculation of gang deviation from frequency

## 8.3 Evaluation

## Chapter 9

## Appendices

# Bibliography

[Uhrenwiki] (1) <https://www.uhren-wiki.net/index.php?title=Zeitwaage>

[ncsli] <https://www.ncsli.org/c/f/p11/286.314.pdf>

[chronoskop] <http://www.chronoskop.com/index.php/chronoskop-zeitwaagen-von-preislisit-timegraphers/>

[Picamera] 2) picamera readthedocs

[SAD] 3) Wikipedia: Sum of absolute differences

[Schlagzahl] 4) Wikipedia: Schlagzahl

[Caliber Test watch] 5) <http://watchbase.com/eta/caliber/c01-211>

## 9.1 Illustration directory

- Abbildung 1: Animation SAD values. Linda Boedi and Valentin Bossi
- Abbildung 2: Animation hypotenueses. Linda Boedi and Valentin Bossi